


HALM JET & SUPER JET

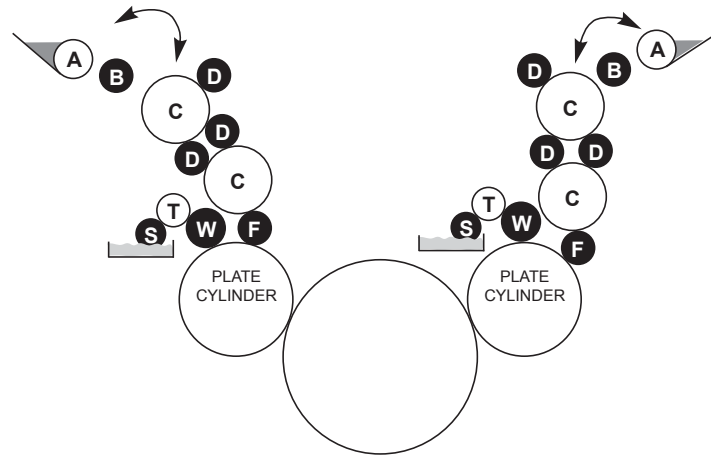

● Soft Rubber Roll ○ Not Available from SYN-TAC

Syn-Tac Cat. No.	Key	Description	Mfg. Part No.	Roll Dia.	Roll Face Lgth.	Overall Shaft Lgth.
HALM JET & SUPER JET						
INK SYSTEM ROLLERS						
66J10	F	INK FORM	4567	1 ²⁵ / ₃₂	12 ³ / ₈	12 ³ / ₄
66J10	D	INK IDLER	4567	1 ²⁵ / ₃₂	12 ³ / ₈	12 ³ / ₄
66J10	B	INK DUCTOR	4567	1 ²⁵ / ₃₂	12 ³ / ₈	12 ³ / ₄
WATER SYSTEM ROLLERS						
66J40	W	WATER FORM	3896	2 ³ / ₈	12 ³ / ₈	13 ¹ / ₂
66J51	S	WATER METER	3895	1 ²⁷ / ₃₂	13 ¹ / ₄	15 ¹ / ₄

HERE'S A TIP on a safe and easy way to remove calcium carbonate glaze from your rollers:

Wash all ink from the rollers. Disengage the clean-up attachment and pour a 50/50 mixture of vinegar and warm water over the rollers. Let the press run for five to ten minutes, adding more of the mixture as needed. Engage the clean-up attachment to remove all of this mixture.

Remember: the amount of vinegar needed will depend on the amount of alkaline build-up. The alkaline will neutralize the vinegar as the calcium carbonate is dissolved.